

# ACE

## USER GUIDE



### CONTENTS

English Operation Guide ..... 1-12

### DISCLAIMER

Thank you for purchasing the XMAX ACE aromatherapy diffuser. We hope you enjoy the quality and performance of your XMAX ACE. To ensure optimal performance and safety of the XMAX ACE, please read this entire manual instructions.

Please read and follow instructions carefully. Understand them fully before using your XMAX ACE. We recommend you keep these instructions in a safe place for future reference. The XMAX ACE is not a medical device and is not intended to diagnose, cure, treat or prevent diseases or other conditions. If you have any health problems, consult your doctor before using the XMAX ACE.

This product should not be used by children, women who are pregnant or breast feeding, or those with life threatening illnesses without first consulting a doctor. Never use before driving or machinery.

The XMAX ACE is not intended to administer medicinal or illegal substances of any kind. Any use of this device could subject the user to fines, penalties, and/or imprisonment under the law of your jurisdiction.


**THIS PRODUCT DOES NOT CONTAIN ANY PLANT MATERIAL.**

### OVERVIEW



XMAX 1

### KIT CONTENTS

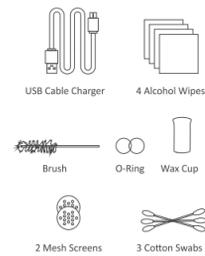

#### SPECIFICATIONS

Battery Capacity	2600mAh(Lithium-Polymer)
Charging Voltage/Current	5V/1A
Working Voltage	3.3-4.2V
On/Off	Click the button 3 times consecutively
Temperature Range	100°C-240°C(212°F-464°F)
Boost Mode	255°C(491°F)
Heating	Ceramic with embedded heating element
Screen	OLED
Size	43*24*99mm(1.69*0.94*3.9inch)

XMAX 2

### OPERATING

#### 1. LOAD



Remove the ceramic cap. Loosely fill the oven with botanical material. All material should be inside the ceramic oven. Load wax cup first for concentrate use. Do NOT load too much wax one time. Note that the tighter the oven is packed the more draw resistance will be experienced.

#### 2. POWER ON/OFF



Click Power Button 3 times, the Ace will power on and begin to heat up under the default settings or your last setting temperature. Click the Power Button 3 times to turn off, and the XMAX Ace will vibrate to indicate off.

XMAX 3

#### 3. ENJOY XMAX ACE

While heating, the OLED display temperature will go up. The device vibration indicates readiness and the timer countdown starts.

Inhale through the cap and enjoy.

This device will automatically begin vaping that removes the need for power/push button vape.



XMAX 4

#### 4. TEMPERATURE SETTINGS



Press the Up Button to increase temperature, press the Down Button to decrease temperature. Click to change by degree, hold to change quickly.

#### 5. BOOST MODE

Press the Power Button twice to enter boost mode, the device temperature will go up to 255°C(491°F) directly with real quick, press the Power Button twice to exist boost mode.



XMAX 5

#### 6. TIMER SWITCHOVER



The Ace has 2 session timers, 5 minutes and 10 minutes.

To switchover the 5 minutes and 10 minutes, just hold the Power Button and UP Button at the same time for 3 seconds.

#### 7. FAHRENHEIT AND CELSIUS SWITCHOVER

To switchover to Fahrenheit, just hold the Power Button and Down Button at the same time for 3 seconds.



XMAX 6

### OLED DISPLAY



XMAX 7

### CHARGING



If battery level is low, the display screen will show "LOW VOLTAGE". You can use provided micro USB cable to charge.

After charging, allow the device to cool down before storage.

XMAX 8

### CLEANING&MAINTENANCE



To keep the Ace working optimally and maintaining the purest taste, we recommend that all parts which come in contact with material or vapor are cleaned regularly.

XMAX 9

### CERAMIC OVEN CLEANING

Slide the cleaning button to push the material out. Use brush and alcohol cotton swab to sweep inside of oven. \*Tip: Perform a burnoff cycle at max temp for 2 minutes after cleaning.



### CAP & FILTER CLEANING



1. Use brush to clean the cap.  
2. Take off the silicon holder, then you can clean the ceramic filter and mesh screen, please wipe and clean with alcohol wipes and cotton swabs.  
3. Take off the cap, and replace with a new o-ring.

XMAX 10

### NOTE

PLEASE USE THIS PRODUCT WITH IN A SAFE MODERATION. DO NOT CLEAN THE WHOLE DEVICE WITH WATER OR SUBMERGE. DO NOT INJECT ANY LIQUID OR OIL INTO THE CERAMIC OVEN. MAKE SURE DEACTIVATE THE DEVICE BY LOCKING. MAKE SURE IT HAS NOT BEEN USED FOR AT LEAST 30 MINUTES AND IS COMPLETELY COOLED OFF BEFORE CLEANING. STORE THE DEVICE IN A DRY AND COOL PLACE TO PROTECT AGAINST THE EFFECTS OF WEATHER. KEEP OUT OF REACH OF CHILDREN AND PETS.

WARNING: HOT COMPONENTS

This product may contain chemicals known to the state of California law to cause cancer, birth defects, or other harmful reproductive harm.

Please do not store this product for extended period with a low charge. If the battery falls below 2%, permanent damage to the battery may occur preventing charging of the battery.

XMAX 11

Do not ever load the device chamber with desired materials, for devices with variable temperature settings please find the best setting that is comfortable and safe for your enjoyment.

XMAX 12



www.topgreen-tech.com

© Topgreen Technology 2023 All rights reserved



Supported By TopGreen Technology Co., Ltd