

Instruction Manual

XMax® II Pro

USER MANUAL



21+

Thanks for purchasing the **XMax® II Pro** diffuser pen. To ensure best experience, please read and understand the instructions fully before your first use of the **XMax® II Pro** diffuser pen. We strongly recommend these instructions are kept for future reference.

We hope you enjoy the quality and performance of your new diffuser pen.

You must be of legal age in your jurisdiction to purchase or use the **XMax® II Pro** diffuser pen. This product should not be used by children, women who are pregnant or breast feeding, or those with life threatening illnesses without first consulting a doctor.

Note that the **XMax® II Pro** diffuser pen is not a medical device and is not intended to diagnose, cure, treat or prevent any diseases or other conditions.


XMax® II Pro diffuser pen is not intended to administer medicinal or illegal substances of any kind. Any illegal use of this device could subject the user to severe fines, penalties and/or imprisonment under the law of your jurisdiction.

THIS PRODUCT DOES NOT CONTAIN BOTANICALS.

1

XMax® II Pro OVERVIEW/CONTENTS

Mouthpiece/Filter SS Cup Heating Chamber Lithium Ion Battery Battery Tube

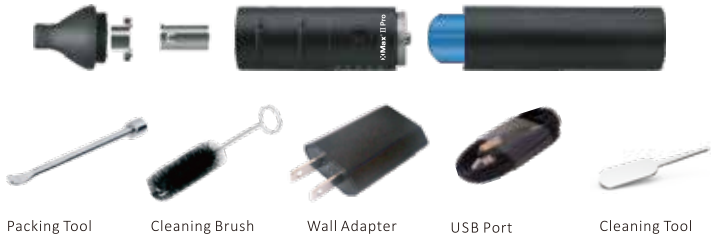

2

SPECIFICATIONS

Capacity	18650 3.7V 2550mAh
Battery Voltage	3.5V- 4.2V
Charger/Output Voltage	5.0V/ 500mAh
On/Off	Click the button 3 times consecutively
Safety Power Duration	5 minutes
Battery Low	LED lights flash 10 times rapidly
Cup Material:	Stainless steel
Heating Chamber:	Ceramic with embedded heating element

3

OPERATION GUIDANCE

- 1.Remove **XMax® II Pro**'s rubber mouthpiece, exposing the heating chamber.
2. Always fil the chamber with moderate spices, etc. Do not compress the plant material too much so that the airflow is not unnecessarily impeded. Then put back the mouthpiece.
OR- if using with fluid, place a small amount of fluid into the ss cup, make sure the filling chamber is partially filled.
3. Click the button 3 times in quick succession. The Red, Green and White lights will flash, and then the battery level light will be displayed.
(White light=Full Power, Green light=Med Power, Red light=Low Power)
4. Wait for the battery level indicator light to go out, then hold the button 2 seconds to select temperature, if hold more than 4 seconds it will cycle through temperatures at a faster rate.
5. The device will automatically heat up after temperature is selected.

4

- 6.The LED light will flash while heating up, and will be stable when reaching the selected temperature until it auto shuts off. Inhale slowly and deeply from the mouthpiece while the light is on.

Temperature Settings Light	Battery Level Display
<ul style="list-style-type: none">● RED: 180°C/356°F● BLUE: 190°C/374°F● GREEN: 200°C/392°F● PURPLE: 210°C/410°F○ WHITE: 220°C/428°F	<ul style="list-style-type: none">● RED: UNDER 20%● GREEN: UNDER 60%○ WHITE: 60-100%

Low Power: The red light will flash 10 times and the device will automatically shut off.

5

CHARGING

To protect and extend the battery, we recommend charging your **XMax® II Pro** via Wall Adapter for at least 6 hours before the first use. It can also be charged via USB port but takes longer time. (External 18650 battery charger is available but not included.)

When charging, **XMax® II Pro**'s LED lights will cycle through red, green and white to indicate the battery level. The lights will go out when fully charged.

If you have any concerns, or if there are any problems please switch off the **XMax® II Pro** and pull the power adapter cord immediately. Do not try to remedy the defect yourself. Contact our Customer Service directly(support@topgreencig.com).

After using the **XMax® II Pro** and power adapter, allow them to cool down before placing them in storage. Please store them in a dry place protected against the effects of weather and out of the reach of children or unqualified persons.

Please use original charger rather than other manufacture chargers. **XMax® II Pro** cannot be used while charging. Otherwise it will be dangerous.

6

LIMITED WARRANTY

The product is warranted for a period of six (6) months from purchase with receipt or six (6) months from date of manufacture without receipt against defects in manufacturing, workmanship, and materials. This device is designed for the use of legal concentrates (solid essential oils) only. Any use of the **XMax® II Pro** with illegal substances will void the warranty.

The warranty does not apply to damage caused by accident, abuse, misuse, natural disaster, user error, or use outside the intended use described in the manual. Use outside the intended use as described in this manual also includes any tampering with device in any way including but not limited to modification to alter functionality or modification to alter appearance. The warranty also does not apply to cosmetic damage including but not limited to dents, scratches/chips to finish, and/ or broken plastic parts.

7

Normal product wear and tear is not covered under warranty. Normal performance degradation of batteries is also not covered by the warranty.

To make a warranty claim, please contact customer support at support@topgreencig.com. The original bill of sale, authenticity code, pictures or videos, and any serial numbers are required to redeem the warranty.

At the manufacturer's discretion, warranty service will be provided by repair of the product or exchange of the product and/or part with a new or functionally equivalent product/part.

8

WARNING

- 1.Do NOT use damaged batteries in all our vaporizers
- 2.Please use our original batteries or high quality batteries from authentic brands instead of clones
- 3.Always use battery suitable for your device. Never carry it loose in your pocket with other metal objects.



9

WARNING



Please do NOT load any liquids into the chamber of all of our vaporizers



Do not over load the device chamber with desired materials, for devices with variable temperature settings please find the best setting that is comfortable and safe for your enjoyment.

10

Caution

Please do not put this product away or leave it for extended periods of time with low charge because if the battery falls below 2% then it will no longer accept a charge.

Charge the battery with a good quality & dedicated charger, Never more than 5V/1A. Otherwise, it will cause damage to battery, serious personal injury, fire.

www.topgreen-tech.com

© Topgreen Technology 2023



11